



**Multi-channel DC Power Supply
TP2000N/TP2000PU/TP4000N Series
Operation Manual V1.0**

CONTENTS

1. INTRODUCTION	- 1 -
2. PRODUCTION MODELS	- 2 -
3. SPECIFICATIONS	- 3 -
4. PANEL CONTROLS AND INDICATORS	- 5 -
4-1. Front Panel Illustration	- 5 -
4-2. Front Panel Control	- 7 -
4-3. Rear Panel Illustration	- 9 -
4-4. Rear Panel Control	- 9 -
5. OPERATION INSTRUCTIONS	- 10 -
5-1. Precaution	- 10 -
5-2. Setting Current Limit	- 10 -
5-3. Constant Voltage/Constant Current Characteristic	- 10 -
5-4. Operation Mode	- 11 -
5-4-1. Independent Operation	- 11 -
5-4-2. Series Tracking Operation	- 12 -
5-4-3. Parallel Tracking Operation	- 13 -
5-4-4. Auxiliary Power Supply Operation	- 14 -
6. MAINTENANCE	- 14 -
6-1. Fuse Replacement	- 14 -
6-2. Line Voltage Conversion	- 15 -
6-3. Cleaning	- 15 -

1. INTRODUCTION

TP2000N/TP2000PU/TP4000N series adjustable DC power supply are designed to be used in applications such as powering operational amplifier, push pull stages, logic circuit and definition systems where plus and minus voltages are required to track with an insignificant error, and in any application where three independent power supplies housed in a single package represent an operating convenience.

The instruments consist of two identical, independently adjustable 0~30V or 0-50V DC power supplies. Each series are different on auxiliary power supplies. Auxiliary power supply of the TP2000N series consist of one fixed 2.5/3.3/5V/3A DC power supplies. The TP2000PU series have two auxiliary power supplies, one fixed 2.5/3.3/5V/3A DC power supplies and one fixed 5V/2A DC power supplies. The TP4000N series are built with two identical, independently adjustable auxiliary power supplies, 2.2~15V/1A.

A front panel switch selects one of three modes of operation: independent, series and parallel. In the independent mode, the output voltage and current of each supply are controlled separately, and each supply is isolated up to 300V from output to chassis or output to output. In the tracking mode, both outputs are automatically connected in series or parallel, and the controls of the left supply adjust the magnitudes of both the positive and negative output voltages. Because the outputs are connected in a tracking configuration, any internal disturbance in the master supply (such as drift or ripple) will cause an equal percentage change in the outputs of both the supplies.

Each power supply is a completely transistorized, well-regulated, constant voltage/constant current supply that will furnish full rated output voltage at the maximum output current or can be continuously adjusted throughout the output range. The front panel current controls can be used to establish the output current limit (overload or short circuit) when the supply is used as a constant voltage source (independent or tracking modes) and the voltage controls can be used to establish the voltage limit (ceiling) when the supply is used as a constant current source (independent mode only). The supply will automatically cross over from constant voltage to constant current operation (current limited operation in the tracking mode) and vice versa if the output current or voltage exceeds these preset limits. Each supply had its own front panel meter that can measure output voltage and current. One power supply may be used as a master supply controlling, one slave supplies furnishing various voltages or current for a system. When operated with the front panel mode switch in the tracking position, the instrument is automatically internally connected in auto-tracking configuration.

Another feature of this instrument is its output ON/OFF key.

- a. For model TP-2303N/2305N/2503N, it is only the key to cut off or resume the output as other similar instrument.
- b. For model TP-2303PU/2305PU/2503PU/4303N/4305N/4503N, it is not only the key to cut off or resume the output, but also be endowed with a new function which their kindred have not. This function is that when the output has been cut off, the both intending voltage and current can be preset, though in model TP-2303N/2305N/2503N condition, only the intending voltage can be adjusted. It means that CC preset is very easy as CV preset. Also in this way, an over current by any unknown load can be avoided. So the new function of the key is a safety design. Especially this feature is very important to the student use.

2. PRODUCTION MODELS

Model	Main output CH1/CH2	Other output	Preset V&I	Output ON/OFF	Tracking operation	Dimension	Weight
TP-2303N	0~30V x2 0~3A x2	CH3: 2.5/3.3/5V/3A		√	√	250x150x310 mm	8kg
TP-2305N	0~30V x2 0~5A x2			√	√		9.5kg
TP-2503N	0~50V x2 0~3A x2			√	√		9.5kg
TP-2303PU	0~30V x2 0~3A x2	CH3: 2.5/3.3/5V/3A USB: 5V/2A	√	√	√		8.5kg
TP-2305PU	0~30V x2 0~5A x2		√	√	√		10kg
TP-2503PU	0~50V x2 0~3A x2		√	√	√		10kg
TP-4303N	0~30V x2 0~3A x2	CH3/CH4: 2.2~15V/1A	√	√	√		8.5kg
TP-4305N	0~30V x2 0~5A x2		√	√	√		10kg
TP-4503N	0~50V x2 0~3A x2		√	√	√		10kg

3. SPECIFICATIONS

Table 1

Model		TP-2303N	TP-2305N	TP-2503N	TP-2303PU	TP-2305PU	TP-2503PU
Main output	Rated voltage	0~30V x2	0~30V x2	0~50V x2	0~30V x2	0~30V x2	0~50V x2
	Rated current	0~3A x2	0~5A x2	0~3A x2	0~3A x2	0~5A x2	0~3A x2
Constant voltage operation							
Line regulation		≤0.01%+3mV					
Load regulation		≤0.01%+3mV	≤0.02%+5mV	≤0.01%+3mV	≤0.01%+3mV	≤0.02%+5mV	≤0.01%+3mV
Ripple & Noise		≤1mVrms	≤2mVrms	≤1mVrms	≤1mVrms	≤2mVrms	≤1mVrms
Constant current operation							
Line regulation		≤0.2%+3mA					
Load regulation		≤0.2%+3mA	≤0.2%+5mA	≤0.2%+3mA	≤0.2%+3mA	≤0.2%+5mA	≤0.2%+3mA
Ripple & Noise		≤3mArms	≤6mArms	≤3mArms	≤3mArms	≤6mArms	≤3mArms
Tracking operation							
Parallel	Line regulation	≤0.01%+3mV					
	Load regulation	≤0.02%+5mV	≤0.02%+5mV	≤0.02%+5mV	≤0.02%+5mV	≤0.02%+5mV	≤0.02%+5mV
Series	Line regulation	≤0.01%+5mV					
	Load regulation	≤300mV					
Fixed output							
Voltage		CH3: 2.5V/3.3V/5V±0.25V			CH3: 2.5V/3.3V/5V±0.25V USB output 5V±0.25V		
Current		CH3: 3A			CH3: 3A USB output: 2A		
Load regulation		≤25mV @110/220VAC rated input					
Ripple & Noise		≤2.0mVrms					
Display							
Voltmeter		3 digits LED display					
Ammeter		3 digits LED display					
Resolution		100mV/10mA					
Accuracy		Real voltage and current output: ±(1% reading+2 digits) Preset voltage and current: ±(1% reading+8 digits)					
General							
Operating environment		0°C~40°C, ≤80%RH					
Storage environment		-10°C~70°C, ≤70%RH					
Power source		AC110V/220V±10%, 50/60Hz					
Accessories		Power cord x1, Operation manual x1, Test lead x1					
Dimension		250Wx150Hx310Dmm					
Weight		8kg	9.5kg	9.5kg	8.5kg	10kg	10kg

Table 2

Model	TP-4303N	TP-4305N	TP-4503N
Output	0~30V/0~3A x2 2.2~15V/1A x2	0~30V/0~5A x2 2.2~15V/1A x2	0~50V/0~3A x2 2.2~15V/1A x2
Constant voltage operation			
Line regulation	≤0.01%+3mV		
Load regulation	≤0.01%+3mV	≤0.02%+5mV	≤0.01%+3mV
Ripple & Noise	≤1mVrms	≤2mVrms	≤1mVrms
Constant current operation			
Line regulation	≤0.2%+3mA		
Load regulation	≤0.2%+3mA	≤0.2%+5mA	≤0.2%+3mA
Ripple & Noise	≤3mArms	≤6mArms	≤3mArms
Tracking operation			
Parallel	Line regulation	≤0.01%+3mV	
	Load regulation	≤0.02%+5mV	
Series	Line regulation	≤0.01%+5mV	
	Load regulation	≤300mV	
Auxiliary output (CH3/CH4)			
Output voltage	2.2V~15V		
Output current	Fixed 1A		
Load regulation	≤25mV@110V/220Vac rated input		
Ripple & noise	≤2mVrms		
Display			
Voltmeter	3 digits LED display		
Ammeter	3 digits LED display		
Resolution	100mV/10mA		
Accuracy	Real voltage and current output: ±(1% reading+2 digits) Preset voltage and current: ±(1% reading+8 digits)		
General			
Operating environment	0°C~40°C, ≤80%RH		
Storage environment	-10°C~70°C, ≤70%RH		
Power source	AC110V/220V±10%, 50/60Hz		
Accessories	Power cord x1, Operation manual x1, Test lead x1		
Dimension	250Wx150Hx310Dmm		
Weight	8.5kg	10kg	10kg

4. PANEL CONTROLS AND INDICATORS

4-1. Front Panel Illustration

a. TP-2303N/2305N/2503N Front panel

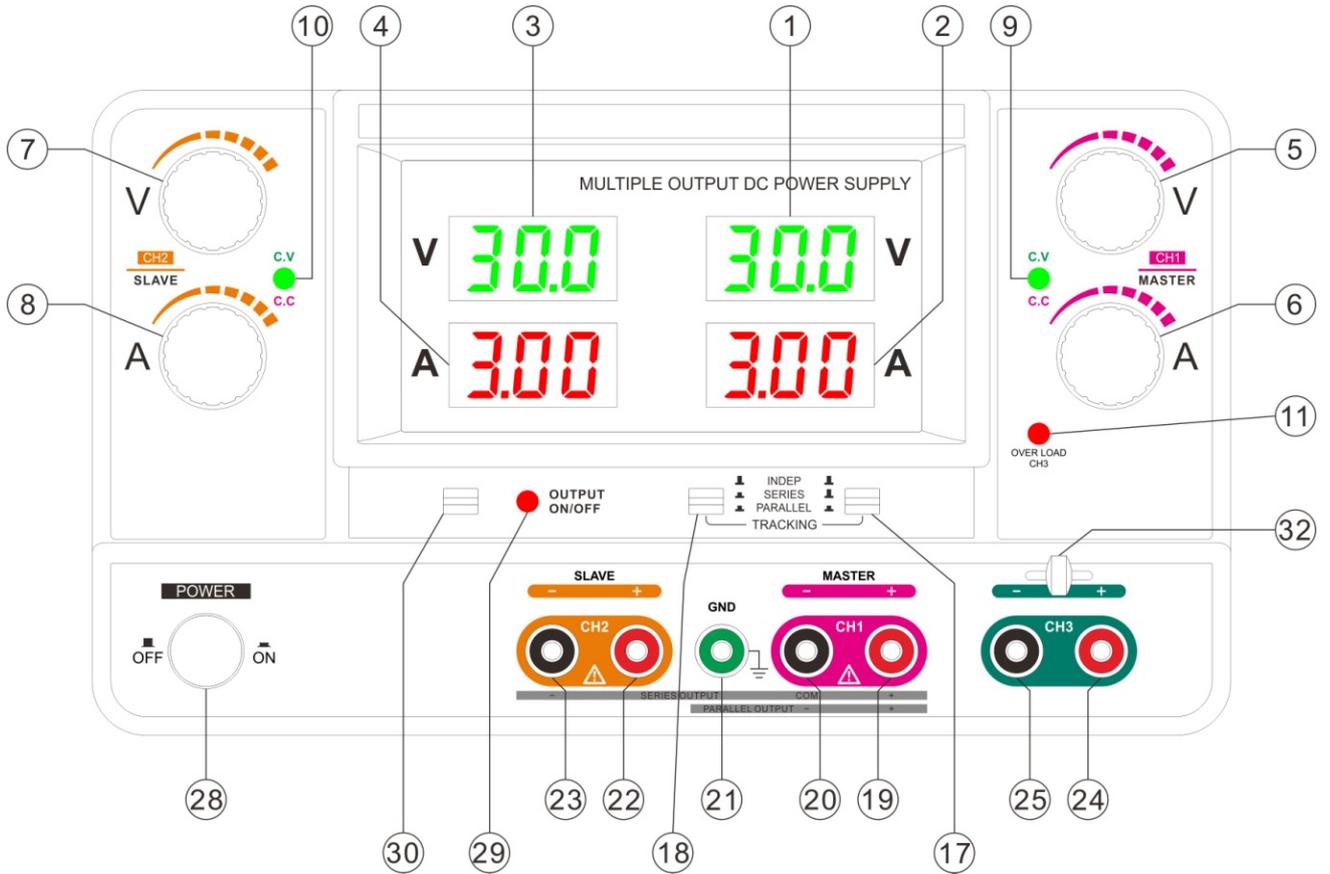


Fig.4-1

b. TP-2303PU/2305PU/2503PU Front panel

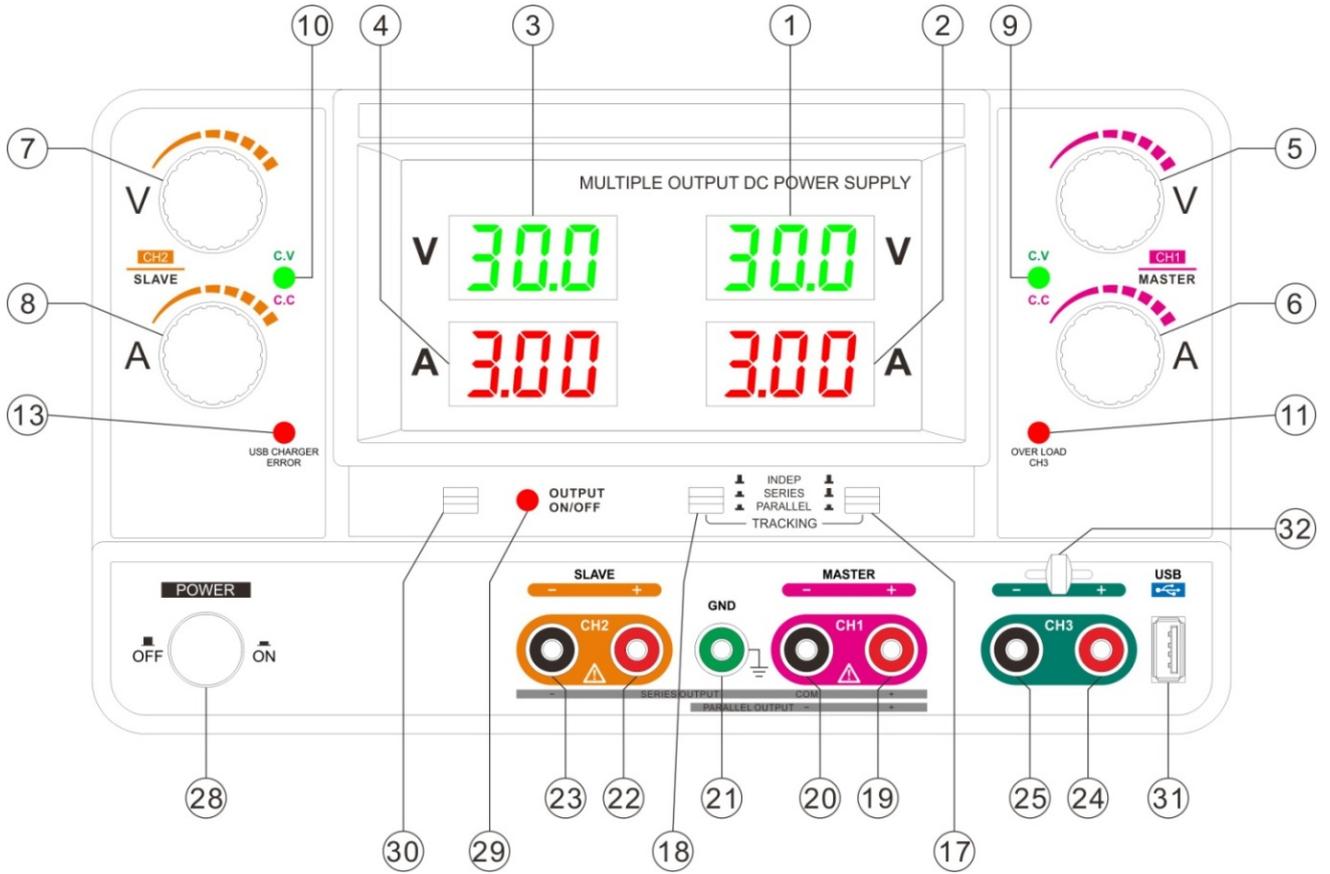


Fig.4-2

c. TP-4303N/4305N/4503N Front panel

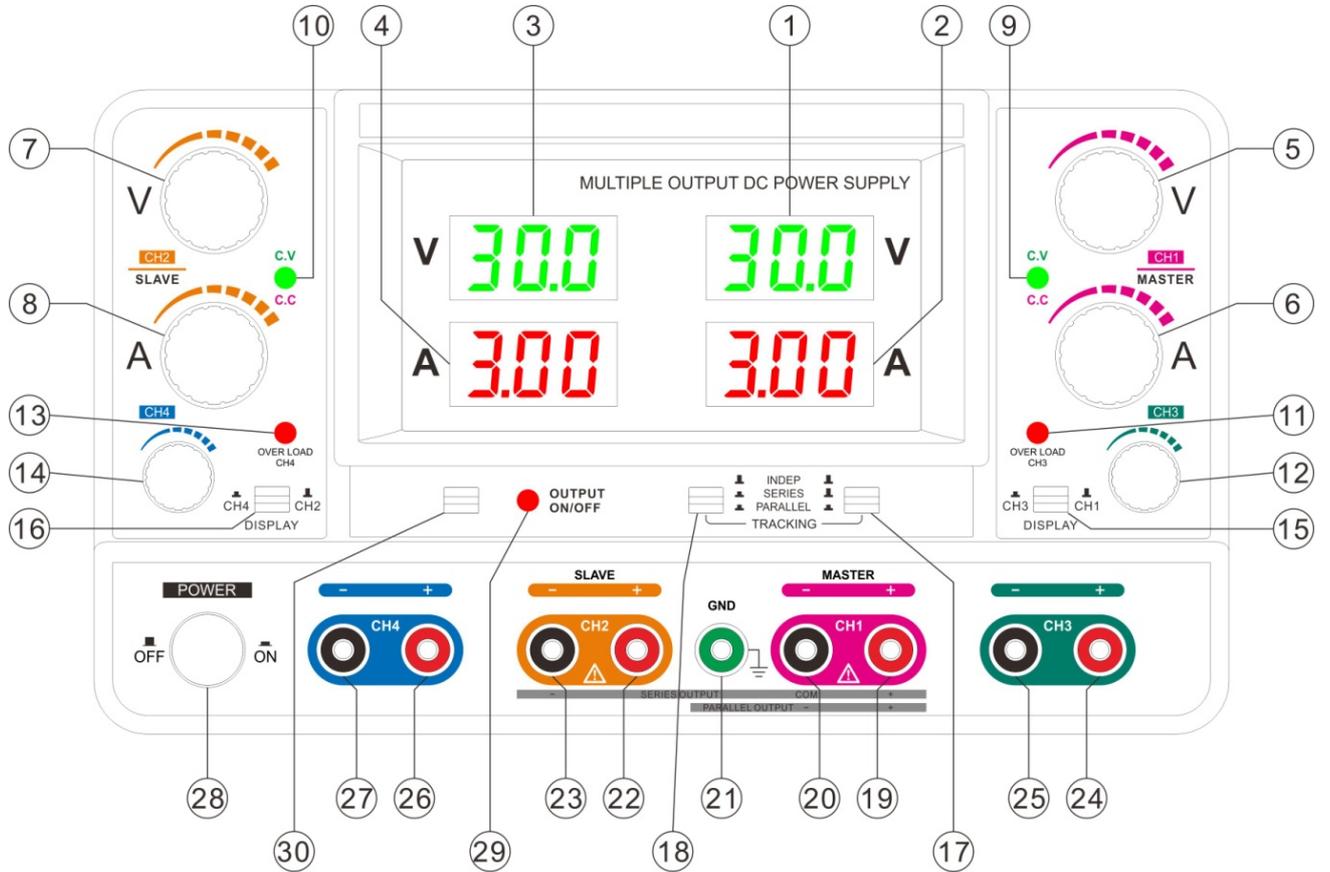


Fig.4-3

4-2. Front Panel Control

1	V LED display	: Indicates the MASTER (CH1) output voltage.
2	A LED display	: Indicates the MASTER (CH1) output current.
3	V LED display	: Indicates the SLAVE (CH2) output voltage.
4	A LED display	: Indicates the SLAVE (CH2) output current.
5	Voltage control	: For adjustment of the output voltage of the MASTER (CH1) supply. Also functions as adjustment control for the maximum output voltage of the SLAVE (CH2) supply when either parallel or series tracking operation.
6	Current control	: For adjustment of the output current of the MASTER (CH1) supply. Also functions as adjustment control for the maximum output voltage of the SLAVE (CH2) supply when either parallel or series tracking operation.
7	Voltage control	: For adjustment of the output voltage of the SLAVE (CH2) supply when the independent operation.
8	Current control	: For adjustment of the output current of the SLAVE (CH2) supply.
9	MASTER (CH1) C.V/C.C indicator	: Lights in green color when the MASTER (CH1) supply is in the constant voltage operation (C.V), in either the Series or Parallel Tracking mode, both the MASTER (CH1) AND SLAVE (CH2) supplies are in the constant voltage operation. : Lights in red color when the MASTER (CH1) supply is in the constant current operation.
10	SLAVE (CH2) C.V/C.C indicator	: Lights in green color when the SLAVE (CH2) supply is in the constant voltage operation. : Lights in red color when the SLAVE (CH2) supply is in the constant current operation. Also lights when the TRACKING PARALLEL mode is selected.
11	Over load indicator	: Lights when load on CH3 becomes too large.
12	Voltage control	: For adjustment of the output voltage of the CH3 supply.
13	Indicator	: As error indicator for TP-2303PU/2305PU/2503PU: this indicator lights when there is error during charging mobile phone or other small electronic devices. : As CH4 overload indicator for TP-4303N/4305N/4503N: this indicator lights when CH4 is overloaded.
14	Voltage control	: For adjustment of the output voltage of the CH4 supply.
15	CH1/CH3 display switch	: For switch between voltage display of CH1 and CH3.
16	CH2/CH4 display switch	: For switch between voltage display of CH2 and CH4.

17&18 TRACKING Mode Switches:

Two push-button switches that select INDEPENDENT mode, series tracking mode, or parallel tracking mode as follows:

a) When both switches are disengaged (out), the unit is in the INDEPENDENT mode and the MASTER (CH1) and SLAVE (CH2) power supplies are completely independent from one another.

b) When the left switch is engaged (in) and the right switch is disengaged (out), the unit is in the TRACKING SERIES mode.

In this mode, maximum voltage of both supplies is set using the MASTER (CH1) VOLTAGE controls (voltage at output terminals of the SLAVE (CH2) supply tracks the voltage at the output terminals of the MASTER (CH1) supply). Also, in this mode of operation the positive terminal (red) of the SLAVE (CH2) supply is connected to the negative terminal (black) of the MASTER (CH1) supply.

This allows the two supplies to be used as one 0 to double rating voltage supply.

c) When both switches are engaged (in), the unit is in the TRACKING PARALLEL mode. In this mode the MASTER (CH1) and SLAVE (CH2) supplies are wired together in parallel and both the maximum current and voltage are set using the MASTER (CH1) controls. The MASTER (CH1) and SLAVE (CH2) outputs can be used as two individual (but tracking) power supplies or just the MASTER (CH1) output can be used as a 0 to rating voltage supply with a 0 to double rating current capability.

19	"+" Output terminal	: Positive polarity output terminal for the MASTER (CH1) supply.
20	"-" Output terminal	: Negative polarity output terminal for the MASTER (CH1) supply.
21	"GND" terminal	: Earth and chassis ground.
22	"+" Output terminal	: Positive polarity output terminal for the SLAVE (CH2) supply.
23	"-" Output terminal	: Negative polarity output terminal for the SLAVE (CH2) supply.
24	"+" Output terminal	: Positive polarity output terminal for the CH3 supply.
25	"-" Output terminal	: Negative polarity output terminal for the CH3 supply.
26	"+" Output terminal	: Positive polarity output terminal for the CH4 supply.
27	"-" Output terminal	: Negative polarity output terminal for the CH4 supply.
28	Power switch	: ON/OFF the power input.
29	Output indicator	: Lights when switch is engaged (in).
30	Output ON/OFF switch	: DC power supply output when switch is engaged (in). And when output is off, both the voltage and current can be adjusted before the output is resumed.
31	USB output	: Supplies fixed 5V/2A DC power supply to mobile phone and other devices requiring 5V DC power supply.
32	CH3 voltage slide switch	: Slides from left to right to select fixed voltage output: 2.5V/3.3V/5V.

4-3. Rear Panel Illustration

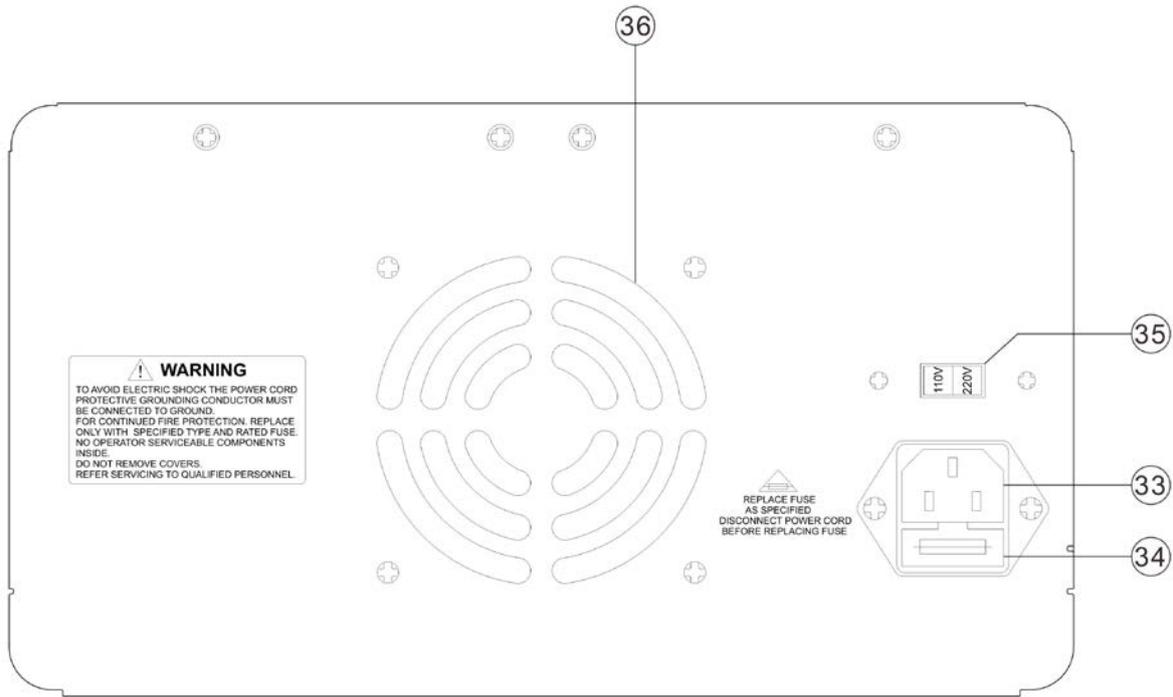


Fig.4-4

4-4. Rear Panel Control

- 33 Power socket
- 34 Fuse holder
- 35 AC input selector
- 36 Cooling fan

: The power transformer is designed to permit operation in 110V (115V/120V) or 220V (230V/240V), 50/60Hz line voltage. To convert from one line voltage to another is done by change AC input selector as shown in section 6-2.

5. OPERATION INSTRUCTIONS

5-1. Precaution

1) AC input

AC input must be within the range of line voltage $\pm 10\%$ 50/60Hz.



WARNING. To avoid electrical shock, the power cord protective grounding conductor must be connected to ground.

2) Installation

Avoid using the supply in a place where the ambient temperature exceeds 40°C.

Allow enough space around the power supply for ventilation.



WARNING. To avoid damaging the power supply, do not use it in a place where ambient temperature exceeds 40°C.



WARNING. Voltages more than 60V DC are a lethal shock hazard to the user. Be careful when connecting power supplies to achieve voltages higher than 60V DC total or 60V DC between any connection and earth ground.

Operation mode: single or tracking (serial or parallel) operation (two units).



CAUTION.

- 1 The instrument must be operated under rated main supply. If it is meant to work for a long time, it is suggested to use 60-70% instead of full load so as to avoid rapid aging.
2. Avoid frequent short-circuit operations.
3. In case of the instrument with full load, do not turn on the instrument. Before adding load, adjust the voltage knob to the minimum value, then turn on the instrument. Next turn the voltage/current adjustment knob to set targeted values.

3) Output voltage overshoot

Voltage between output terminals may exceed the present value when the power is turned on or off.

5-2. Setting Current Limit

- 1) Determine the maximum safe current for the device to be powered.
- 2) Temporarily short the positive "+" negative "-" terminals of the power supply together with a test lead. But for TP-2303PU/2305PU/2503PU/4303N/4305N/4503N, just pushing the output ON/OFF key can make the short circuit function.
- 3) Rotate the VOLTAGE control away from zero sufficiently for the CC indicator to light.
- 4) Adjust the CURRENT control for the targeted current limit. Read the current value on the ammeter.
- 5) The current limit (over load protection) has now been preset. Do not change the CURRENT control setting after this step.
- 6) Remove the short between the "+" and "-" terminals and hook up for constant voltage operation.

5-3. Constant Voltage/Constant Current Characteristic

The working characteristic of this series Power Supplies is called a constant voltage/constant current automatic crossover type. This permits continuous transition from constant current to constant voltage modes in response to the load change. The intersection of constant voltage and constant current modes is called the crossover point. Fig.5-1 shows the relationship between this crossover point and the load.

For example, if the load is such that the power supply is operating in the constant voltage mode, a regulated output voltage is provided. The output voltage remains constant as the load increases up until the point where the preset current limit is reached. At that point, the output current becomes constant and the output voltage drops in proportion to further increases in load. The point is indicated by the front panel LED indicators. The crossover point is reached when the CV indicator goes off and the CC indicator comes on.

Similarly, good example of this would be seen when charging a 12-volt battery. Initially, the open circuit voltage of the power supply may be preset for 13.8 volts. A low battery will place a heavy load on the supply and it will operate in the constant current mode, which may be adjusted for a 1 amp charging rate. As the battery becomes charged, and its voltage approaches 13.8 volts, its load decreases to the point where it no longer demands the full 1 amp charging rate. This is the crossover point where the power supply goes into the constant voltage mode.

Crossover from the constant current to the constant voltage mode automatically occurs from a decrease in load.

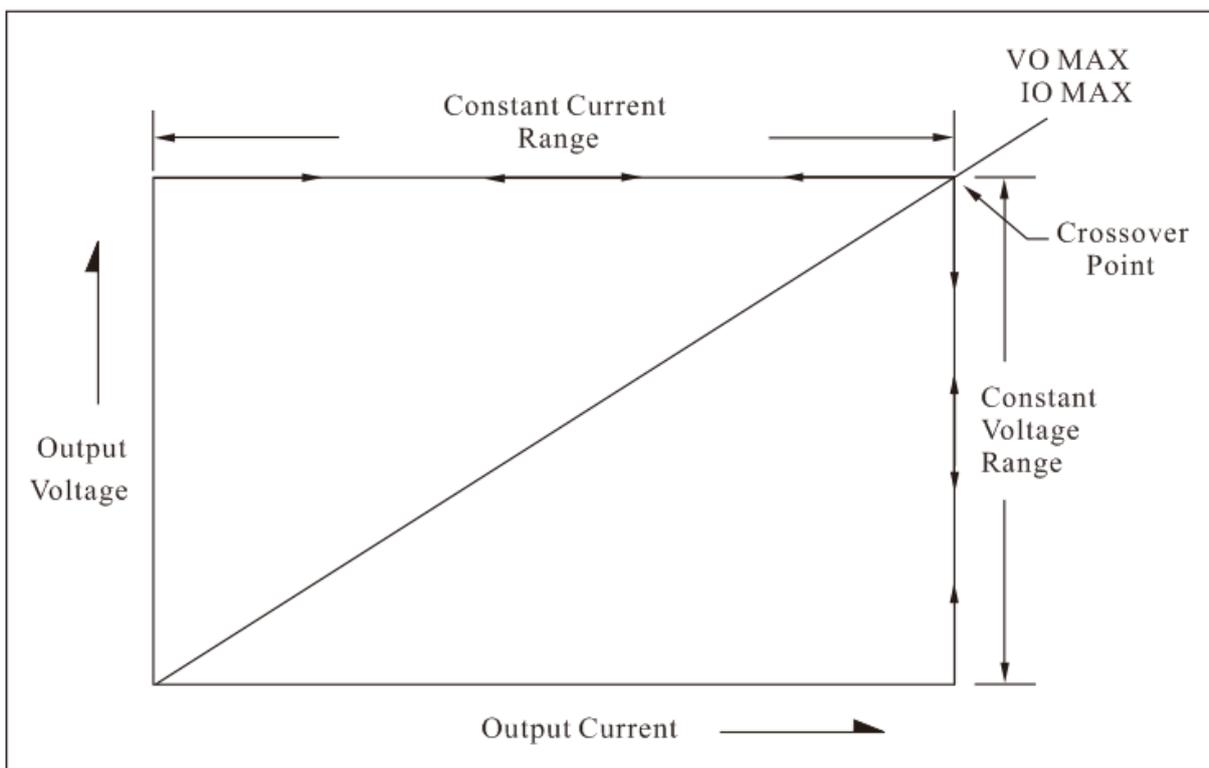


Fig.5-1 Constant Voltage/Constant Characteristic

5-4. Operation Mode

5-4-1. Independent Operation

The "MASTER" and "SLAVE" supplies each provide a 0 to rating volts output at up to rating amps. This procedure covers the use of the MASTER and SLAVE supplies only when they are used independently from one another. When used in the INDEPENDENT operating mode, the operating controls of the two power supplies are completely independent and either supply can be used individually or both can be used simultaneously.

- A. Disengage both TRACKING mode switches (both switches out) so that the power supply is in the INDEPENDENT operating mode.
- B. Adjust "Voltage" control and "Current" control to the desired output voltage and current.
- C. Turn off the power supply and the equipment to be powered during hook-up.

- D. Connect the positive polarity of the device being powered to the red (+) terminal of the power supply.
- E. Connect the negative polarity of the device being powered to the black (-) terminal of the power supply.
- F. Fig.5-2 illustrates the connection procedure.

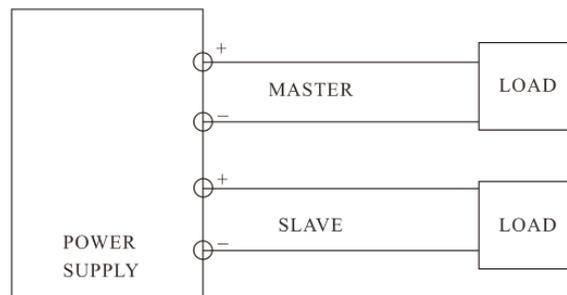


Fig.5-2 Independent Operation

5-4-2. Series Tracking Operation

When the series tracking mode of operation is selected, the positive (red) terminal of the SLAVE supply output is internally connected to the negative (black) terminal of the MASTER supply.

In the series tracking mode, the maximum output voltage of both MASTER and SLAVE supplies can be simultaneously varied with one control. The maximum SLAVE supply voltage is automatically set to the same value as the MASTER supply by using the MASTER VOLTAGE controls.

- A. Set the power supplies to the TRACKING SERIES mode by engaging the left TRACKING switch and release the right TRACKING switch. In this case, the output voltage (across the two supplies) is actually double the displayed value.
For example, if the MASTER display is set for voltage metering and the SLAVE display for current metering, the output voltage across the MASTER positive (red) terminal and the SLAVE negative (black) terminal would be double the reading on the MASTER LED Display (since both supplies are putting out the same voltage). The actual output current would be the value read from the SLAVE LED Display (since the two supplies are wired in series, current flowing through each supply must be equal).
- B. Set the SLAVE CURRENT control the fully clockwise position. The maximum current is set using the MASTER CURRENT control. Follow the instructions for "Setting Current Limit" (INDEPENDENT USE OF "MASTER" OR "SLAVE" SUPPLY section of this manual, using the MASTER CURRENT control.

NOTE:

Because the supplies are being used in series, either CURRENT control can be used to set maximum current. If desired, the MASTER CURRENT control can be rotated fully clockwise and the SLAVE CURRENT control can be used to adjust the maximum current value. Because current through the two supplies must be equal when they are being used in series, the lower CURRENT control setting will set the maximum output current.

- C. Adjust the output voltage to the desired level using the MASTER VOLTAGE controls.
- D. Turn off the power supply and the equipment to be powered during hook-up.

- E. If "single supply" operation is desired, this allows the power supply to be used as twice the voltage and rating current simply by using the negative (black) terminal of the SLAVE supply and the positive (red) terminal of the MASTER supply, the configuration as shown in Fig.5-3.

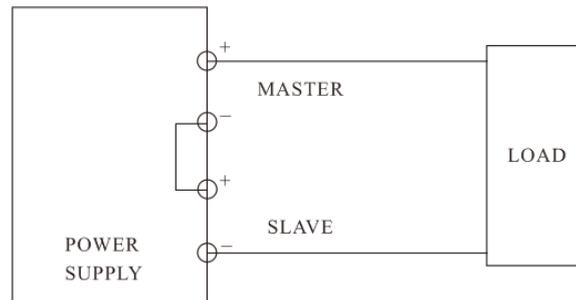


Fig.5-3 Single Supply

If the chassis or common of the equipment being powered is separate from both positive and negative polarity power inputs. The output of the SLAVE (negative) supply is tracking the output of the MASTER (positive) supply. The configuration is shown in Fig.5-4.

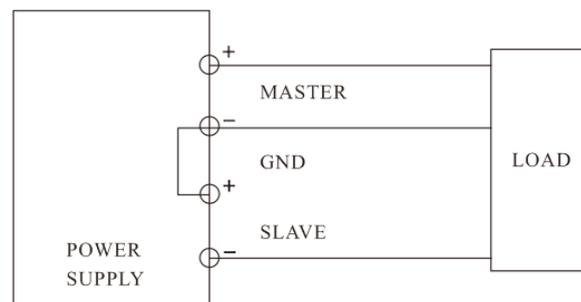


Fig.5-4 Positive and Negative Supply

5-4-3. Parallel Tracking Operation

In the parallel tracking mode of operation, both supplies are strapped together (in parallel). This allows for a rating voltage supply with a double rating current capability. Only the MASTER output terminals are used for parallel tracking operation. In the parallel tracking mode, the SLAVE supply output voltage and current are tracking the MASTER supply output voltage and current.

- A. Set the power supplies to the TRACKING PARALLEL mode by engaging both TRACKING switches.
- B. Because both voltage and current of the SLAVE supply track the MASTER supply, the maximum current and voltage are set using the MASTER controls. Using the MASTER supply output jacks, follow the instructions for "Setting Current Limit" (5-2 Section). Remember that the actual current output at the MASTER supply output jack is double the reading on the SLAVE indicator meter.. Then push the output on/off key to enter voltage and current setting.
- C. Adjust the output voltage to the desired level using the MASTER VOLTAGE controls.
- D. Turn off the power supply and the equipment to be powered during hook-up.
- E. Connect the positive polarity of the device being powered to the red (+) terminal of the MASTER power supply.

F. Connect the negative polarity of the device being powered to the black (-) terminal of the MASTER power supply. The configuration is as shown in Fig.5-5.

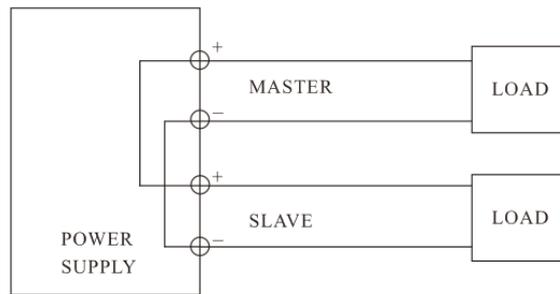


Fig.5-5 Parallel Tracking Operation

5-4-4. Auxiliary Power Supply Operation

The fixed 5V supply provides a 2.5/3.3/5V DC output with a 3 amp current capacity. The supply is ideal for use with TTL circuits.

- A. Turn off the power supply and the equipment to be powered during hook-up.
- B. Connect the polarity the device being powered to the red (+) terminal of the 5V supply.
- C. Connect the negative polarity of the device being powered to the black (-) terminal of the 5V supply.
- D. If the red OVERLOAD indicator lights, too much load has been placed on the supply. This will cause voltage and current to drop and prevent proper operation of the 2.5/3.3/5V supply. To correct this situation, the load on the supply must be decreased so that no more than 3 amps of current are sucked.

The 2.2~15V supply provides adjustable 2.2V to 15V DC output with a 1 amp current capacity. Operation method of this supply is same as above.

6. MAINTENANCE

WARNING

The following instructions are for use by qualified personnel only. To avoid electrical shock, do not perform any servicing other than contained in the operating instruction unless you are qualified to do so.

6-1. Fuse Replacement

If the fuse blows, the CV or CC indicators will not light and the power supply will not operate. The fuse shall not normally open unless a problem has developed in the unit. Try to determine and correct the cause of the blown fuse, then replace only with a fuse of the correct rating type.

The fuse is located in rear panel.



WARNING. For continued fire protection, replace fuse only with 250V of the specified type and rating. And disconnect the power cord before replacing fuse.



WARNING. To protect the transformer and circuits of the unit, a fuse of the correct rating and type must be used. Refer to below for correct fuse ratings.

Fuse ratings:

Model	220VAC rated input	110VAC rated input
TP-2303N	TSD3.15A	TSD6.3A
TP-2305N	TSD6.3A	TSD10A
TP-2503N	TSD6.3A	TSD10A
TP-2303PU	TSD3.15A	TSD6.3A
TP-2305PU	TSD6.3A	TSD10A
TP-2503PU	TSD6.3A	TSD10A
TP-4303N	TSD3.15A	TSD6.3A
TP-4305N	TSD6.3A	TSD10A
TP-4503N	TSD6.3A	TSD10A

6-2. Line Voltage Conversion

The primary winding of the power transformer is tapped to permit operation from 110 or 220Vac $\pm 10\%$, 50/60Hz line voltage. Conversion from one line voltage to another is done by change AC input selector switch. The rear panel identifies the line voltage to which the unit was factory set. To convert to a different line voltage, perform the following procedure:

- 1) Make sure the power cord is unplugged.
- 2) Change the AC select switch to the desired line voltage position.
- 3) A change in line voltage may also require a corresponding change of fuse value. Install the correct fuse as listed on rear panel.

If the output voltage is unsteadiness, please check the AC line that it may be less than 207V/105V.

6-3. Cleaning

To clean the power supply, use a soft cloth dampened in a solution of mild detergent and water. Do not spray cleaner directly onto the instrument, since it may leak into the cabinet and cause damage.

Do not use chemicals containing benzene, benzene, toluene, xylene, acetone, or similar solvents.

Do not use abrasive cleaners on any portion of the power supply.

Should the problems can not be solved, please contact local distributor or the manufacturer.